

## Universal Truck Tester

### Tank Truck Overfill Prevention System Diagnostics



The Scully Universal Truck Tester is the most advanced and comprehensive truck tester available. It checks the operation of tank truck overfill prevention, and self-proving grounding systems. Complete diagnostics limit the expense of downtime.

- Tests all Scully Optic and Thermister Overfill Sensors, the Intellicheck® System, The Load Anywhere® System and the Liquidometer TABS™ System output.
- Simultaneously tests all compartment sensors.
- The only tester which will check the operation of the Ground Bolt and Ball.
- Shows a more accurate reading than any other tester on the market with test results as either "Good, Poor, or Fail" to easily diagnose service requirements.
- A poor reading alerts the driver that it may be time to repair or replace the sensor in question.
- A variety of plug and cable assemblies are available according to the socket needs of the user.
- Rustproof, weather resistant housing.
- Easy to read multicolored LED display.
- Runs on standard "D" size Alkaline batteries.

#### Operation

Move the selector switch to the desired setting. Connect the tester to the tank truck socket with the appropriate plug and cable. The test results will be shown clearly on the easy to read LED display.

#### Compatibility

The tester is compatible with Scully Intellicheck® Load Anywhere®, and independent Scully optic and thermister tank truck sensors.

#### Technical Specifications

Power supply: .....8"D" Cell, alkaline batteries  
 Battery access: .....Remove 2 screws in front panel  
 Operating temperature range: .....-13°F to +113°F (-25°C to +45°C)  
 Maximum number of compartments: .....8  
 Dimensions: .....8" x 6" x 4"  
 Weight (without batteries): .....3.8 lbs (1.7Kg)

#### Ordering Information

| Description                              | Part No. |
|--|----------|
| Scully Universal Tester*                 | 08938    |
| PCAM, 10 Pole Scully Plug and Cable..... | 08926    |
| PCAM, 6 Pole WOGA Plug and Cable.....    | 08927    |
| PCAM, 7 Pole J560 Optic .....            | 08928    |
| PCAM, 4 Pole Plug and Cable .....        | 08936    |
| Adapter 7 Pole Scully Optic to J560..... | 07735    |

\*Order appropriate plug & cable with tester. "D" size batteries not included.

For further information and technical service, please call Scully at (800) 272-8559.

*Biclops, Dynacheck, Dynamic Self-Checking, Dynamic Self-Test, Faysafe, Intellicheck, Intellitrol, Intelliview, Load Anywhere, Maxsafety, MulteCept, Scully, Scultrol, Scul-Lock, Scul-Tel, Scul-Tite, TABS and V.I.P. are registered trademarks of the Scully Signal Company*  
 Specifications are subject to change without notice

Worldwide Contact  
 Scully Signal Company  
 70 Industrial Way  
 Wilmington, MA 01887 USA  
 Tel: 1-800-272-8559 or (617) 692-8600  
 Fax: (617) 692-8620  
 email: sales@scully.com  
 www.scully.com

**Setting New Standards In Safety**

67252 Rev A  
 © Printed in U.S.A. February 1999